



POTENZA ST BACKLIT IPTV REMOTE

PROGRAMMING POWER AND VOLUME

- Turn the TV on.
- Press the **TV** button.
- Hold the **SETUP** button until the **TV** button blinks twice.
- Press **991**.
- Slowly press the **CHANNEL +** button until the TV turns off. Do not hold the button.
- Hold the **SETUP** button until the **TV** button blinks twice.

*If you press the **CHANNEL +** button too rapidly, you may pass the TV code before the time the TV turns off. If the TV is changing channels while you are pressing the **CHANNEL +** button, you will need to start from the beginning.*

PROGRAMMING MASTER POWER

- Press **STB** button.
- Hold the **SETUP** button until the **STB** button blinks twice.
- Press **995**.
- Press **POWER, STB, TV**.
- Hold the **SETUP** button until the **TV** button blinks twice.
- Press **STB**.

