

Control the Remote

TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

Setup

Use for programming sequences of devices controlled by the remote.

REW, PLAY, FFWD, STOP, PAUSE

In STB mode, these control the DVR/PVR functions. In other modes, these can control a VCR, DVD Player or PVR.

Menu

Displays applications including the configuration menu.

Guide

Opens the Interactive Program Guide.

Day +/-

Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue

Access additional features on your set-top box.

Vol +/-

Raise or lower the volume.

Mute

Turn the sound off or on.

FAV

View your favorite channels.

Input

In TV control mode, would change the input of the device you are controlling.

Power

Turn on/off a selected device.

Live

Return to watching live TV.

List

Display a list of recorded shows on your PVR/DVR set-top box.

Info

Display the current channel and program information. Press again for more detail.

Arrow Keys/OK

Navigate and select onscreen choices.

Exit

Exit the current screen.

Page +/-

Page up or down in menu screens & Interactive Program Guide.

Channel +/-

Changes to the next higher or lower channel.

On Demand

Access video on demand services.

Last

Recall the last channel you were watching.

Number Keys (0-9)

Directly select a channel.



FAVORITES

Creating Favorite Lists:

There are 8 pre-defined favorite lists. They are pre-named: Favorite1, Favorite2, etc.

Add or Delete Channels to Favorite Lists:

1. Press Menu on the remote.
2. Arrow down to select "My Settings" and then arrow right to select from the My Settings categories.
3. Arrow down to select the "Favorite Channels" category.
4. Press OK on the remote. The Favorites screen will show the pre-defined favorite lists.
5. Use the up/down arrow key to select your favorite list on the left side of the screen. Channels will show to the right. Any channels currently included as a favorite in this list will have a check next to the channel.
6. Once your favorite list is selected, arrow right to select the channel list. Arrow up/down to select the desired channel. Or, type in a channel using the number keys.
7. Press OK on the remote to add or delete the channel from your list.
8. When done, press the Red button to save your changes.

Using Favorites:

1. Press FAV on the remote. This will display a menu on the TV screen.
2. Use the right/left remote arrows to select from "All" or the different favorite lists. If you exit this screen (with the Exit button on the remote) while a favorite list is selected, you are in favorites-mode using the selected favorite list.
3. Channel up/down and browsing (arrow) up/down navigate between channels in that favorite list. You can directly type in any channel using the number keys. The zapper-bar will also display the name of the "active" favorite list.
4. Press FAV on the remote. Use the right/left remote arrows to select "All". Press Exit to leave Favorites mode.

PARENTAL CONTROLS

There are two types of Parental Controls:

- Setting Program Rating Limits
- Setting Locked Channels

Setting Program Rating Limits:

You can set program limits based on motion-picture ratings (G, PG, R, etc) or TV ratings (TV-G, TV-14, etc). This is done much like Favorites via a screen on the main menu.

If you attempt to tune to a channel that is running a program with a rating at the specified limit or higher, you must enter a PIN before you can view the program.

Setting Locked Channels:

You can lock entire channels. This is done much like Favorites via a screen in the main menu.

Before you can tune to any locked channel, you must enter the PIN. You can also set an option in the main menu so that locked channels do not show in the channel guides and they are also excluded from channel up/down navigation. You may still directly type in the channel number using the number keys on the remote control and then enter the PIN.

REMINDERS

Setting Reminders

Go to either the time- or channel-based guide. Highlight the program you want a reminder, and press the OK button on the remote.